





FlexiHover

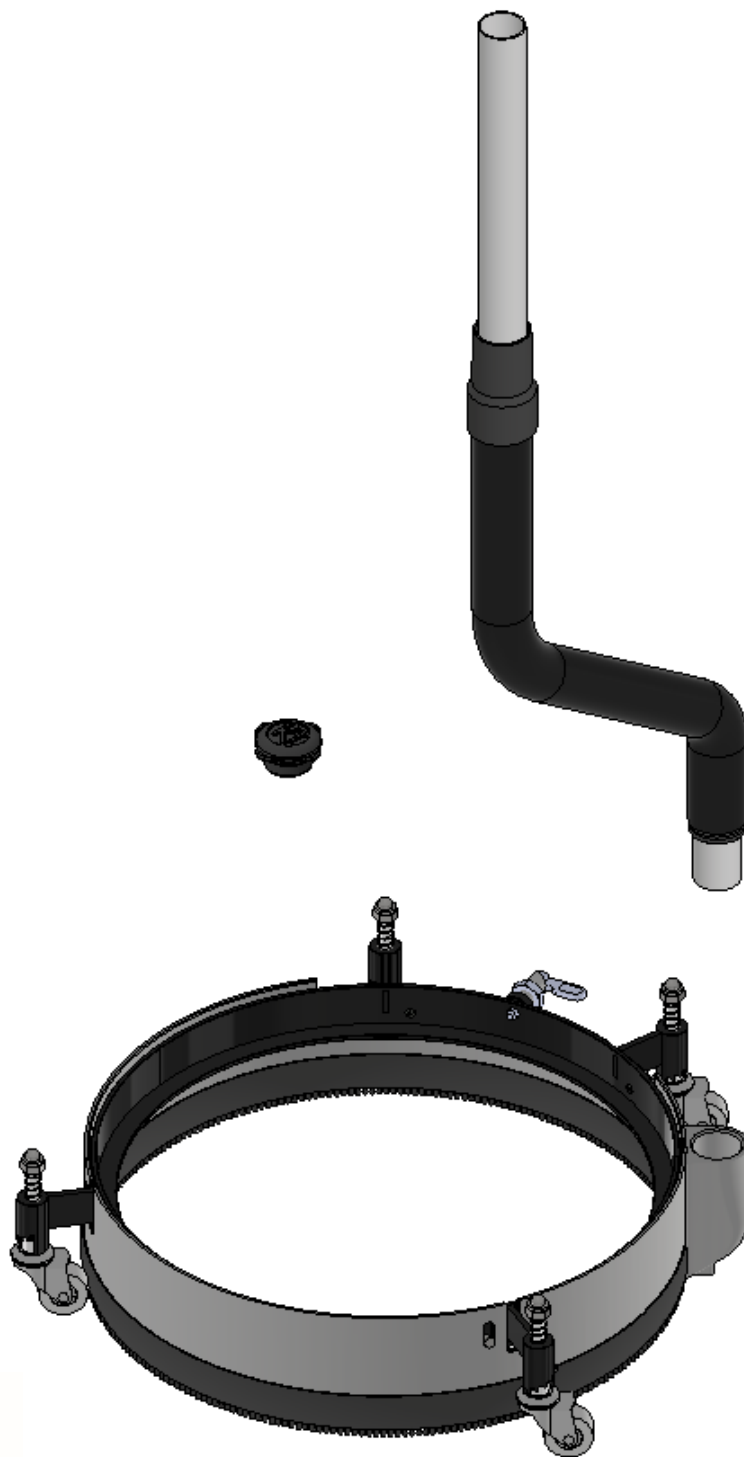

Bona®

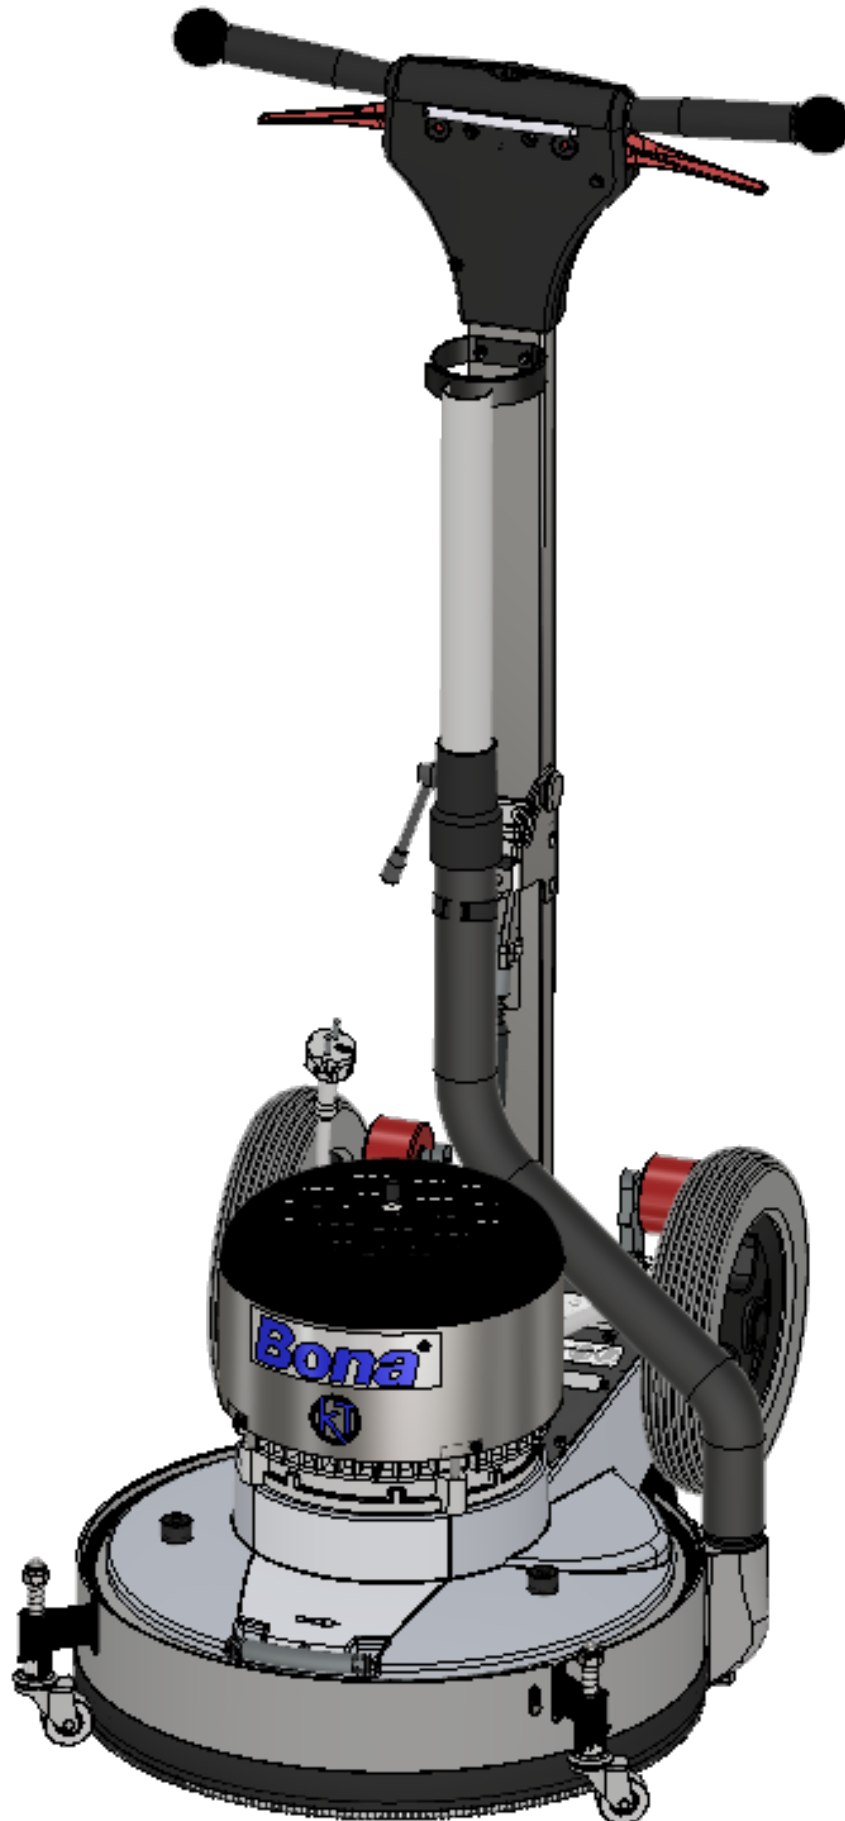

ASSEMBLY PROCEDURES

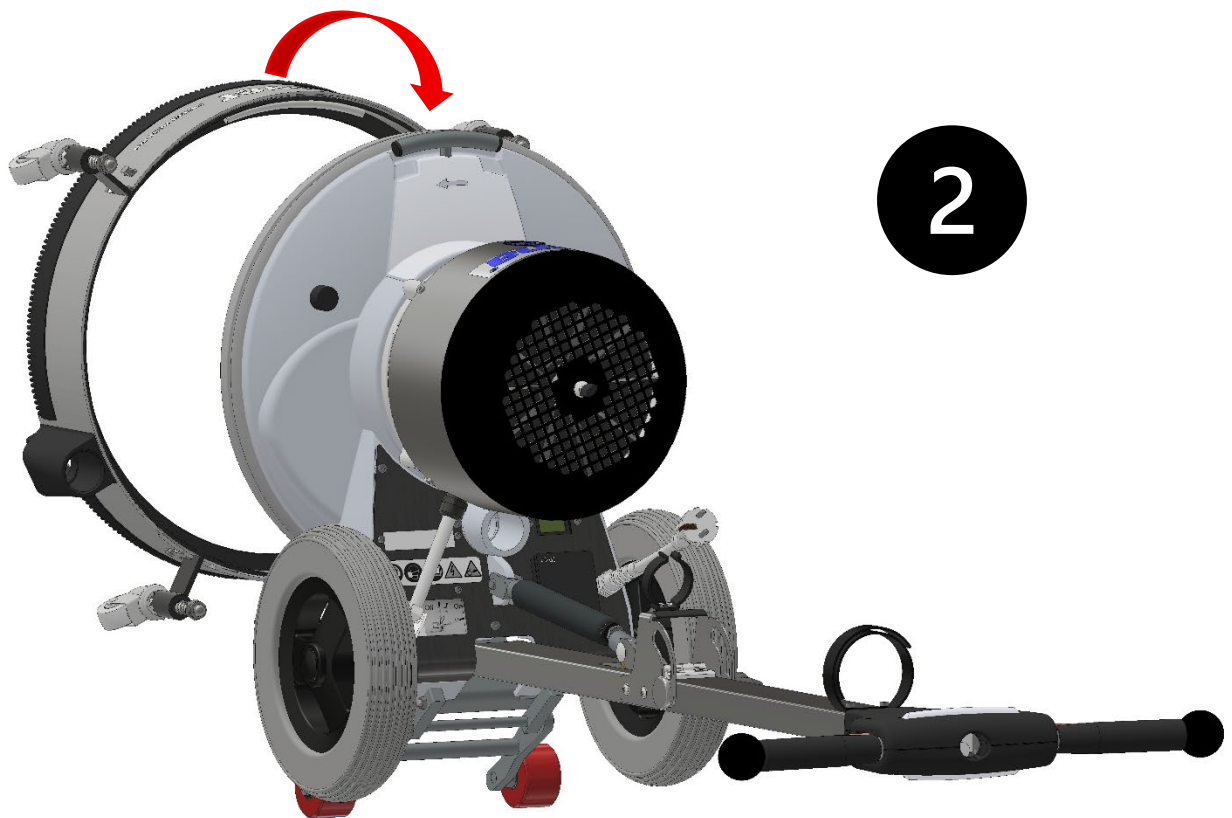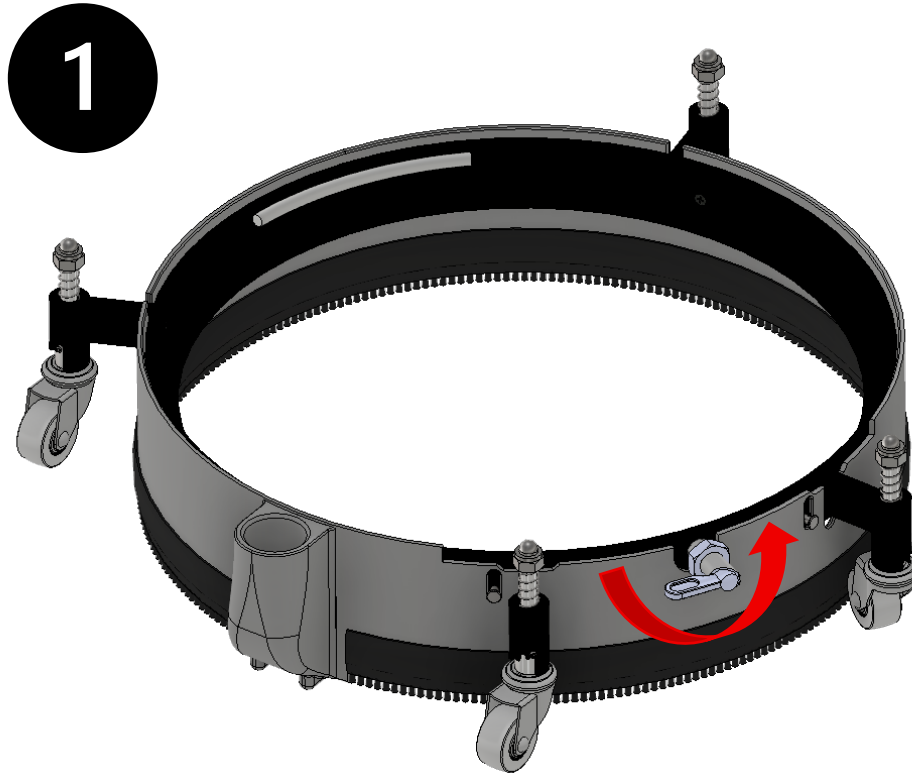





3



4

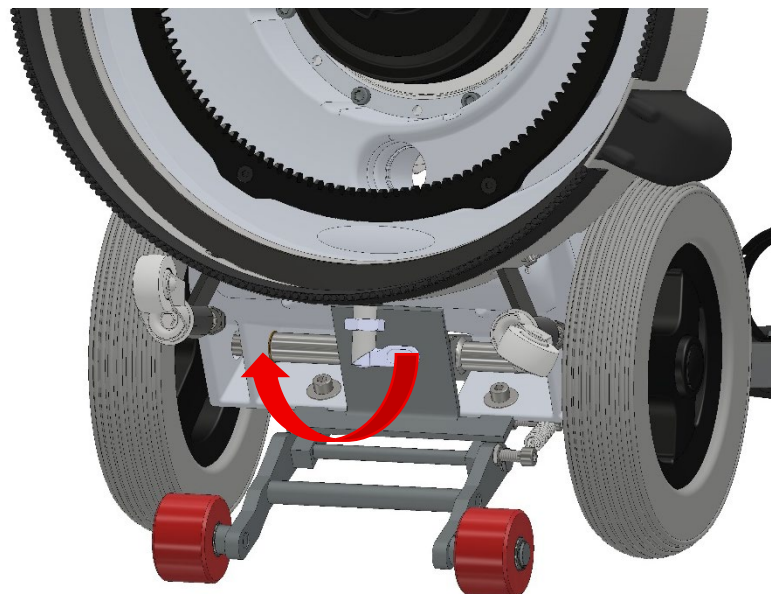


4

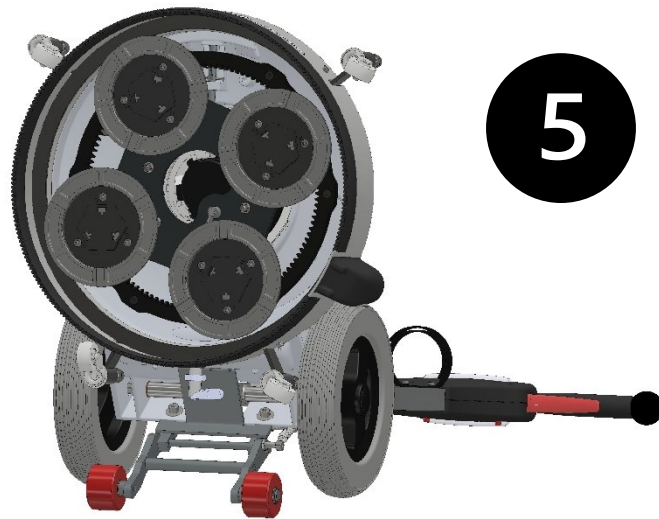


5



6

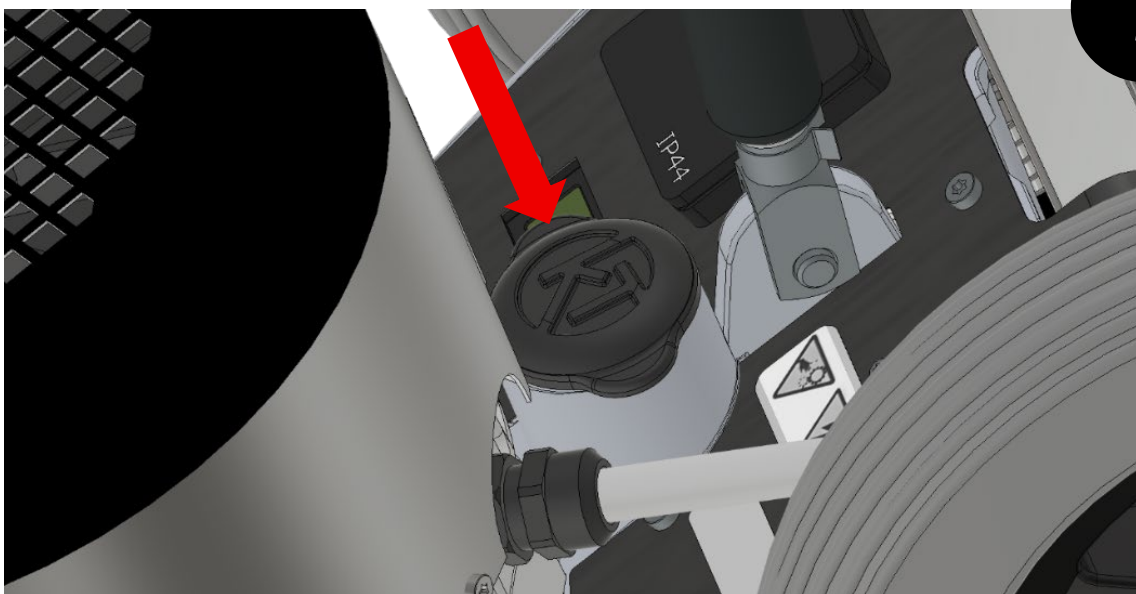


7

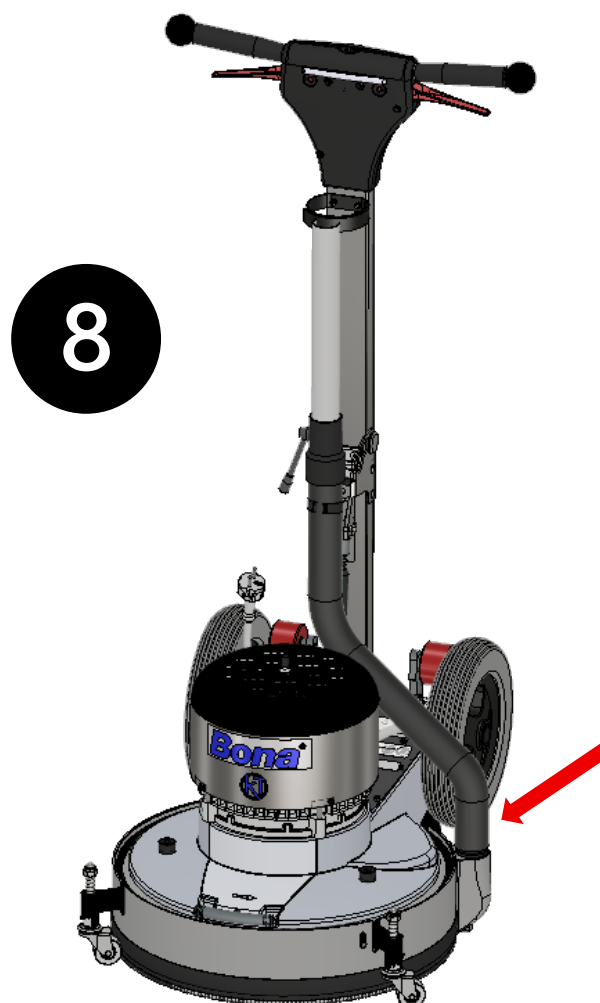



OPERATIONAL DIAGRAM

HOVER WHEELS POSITIONS / PRESSURE


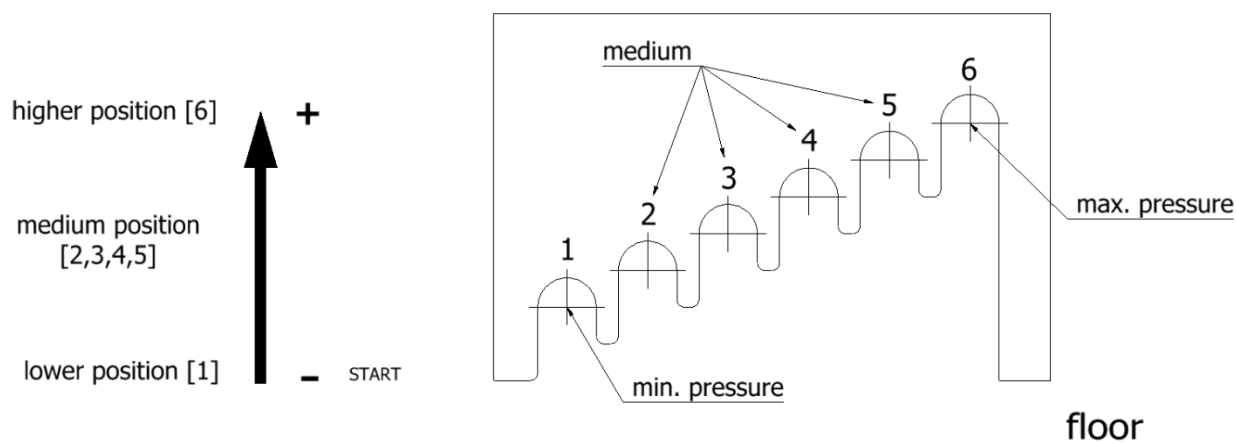


TOOL SETTING




HOVER → TOOLS								
TOOLS	HOVER						data	Notes
	positions						height	
	1	2	3	4	5	6	[mm]	
Normal ABRASIVE DISCS or NET + INTERMEDIATE SOFT PAD 5mm + SPACER HARD PAD 20mm + NEB/CONNECT PLATE	X	X	X	X	*HR	*HR	46	*Hover Released
BRUSHES	-	-	X	X	X	*HR	42	*Hover Released
ROTOBLADE (Diamond Blades)	-	-	X	X	X	X	41	

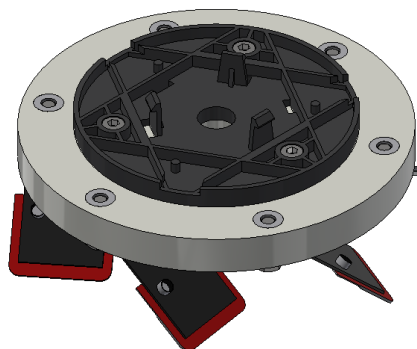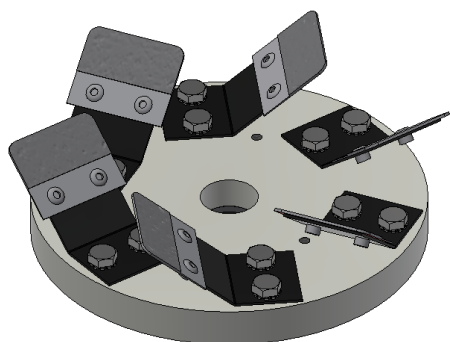

4 ROTOBLADE SET
GR.100
4099941646

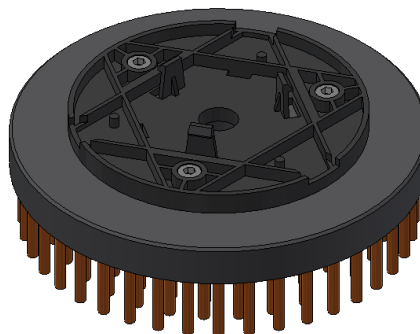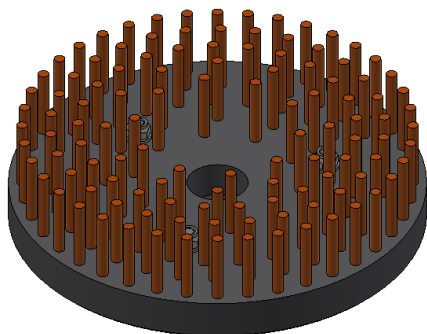

4 TYNEX BRUSHES SET
GR.46
3199941020
4 STEEL BRUSHES SET
3199941030

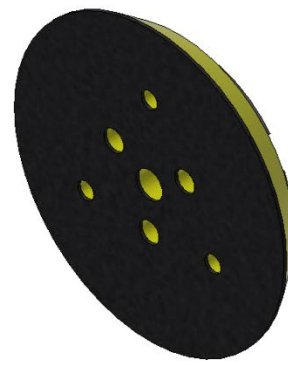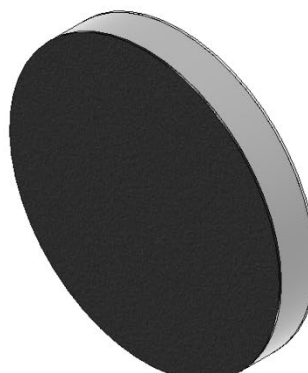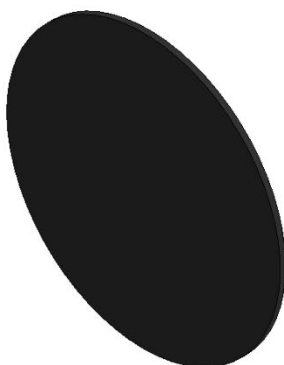

SANDING DISC

AAS472200008

SPACER PAD H=20mm

3199941010

EXPLODED VIEW



3199943190 - FLEXIHOVER			
COMPONENT	ITEM	DESCRIPTION	QTÀ
1	3199940006	LONG SUCTION PIPE BP	1
2	3100033119	FLEXISAND BASE CAP FOR HOVER	1
3	3199943198	COMPLETE HOVER	1
4	3199943130	COMPLETE BRISTLE SUCTION RING	1
5	3100033123	HOVER WHEEL ø40mm WITH M8 PIN	1
6	3100013133	PA6 BLACK BRISTLE ROLL 8+8 HOVER	1,4mt