

Maintenance Instructions

Below is a complete list of available maintenance instructions, along with abbreviations to help you identify and select the right treatment.


WH-C	Wood Hard Wax Oil Cleaning
WH-DC	Wood Hard Wax Oil Deep Cleaning
WH-P	Wood Hard Wax Oil Protecting
WH-RC	Wood Hard Wax Oil Recoating
WL-C	Wood Lacquered Cleaning
WL-DC	Wood Lacquered Deep Cleaning
WL-P	Wood Lacquered Protecting
WL-RC	Wood Lacquered Recoating
WO-C	Wood Oiled Cleaning
WO-DC	Wood Oiled Deep Cleaning
WO-P	Wood Oiled Protecting
WO-RC	Wood Oiled Recoating
WS-C	Wood Sport Cleaning
WS-DC	Wood Sport Deep Cleaning
WS-P	Wood Sport Protecting
WS-RC	Wood Sport Recoating
WD-DC	Wood Decking Deep Cleaning
WD-P	Wood Decking Protecting
WD-RC	Wood Decking Recoating

Cleaning Instructions

Wooden Sports Flooring (Lacquered)

Part of the Bona Care Program

WS-C

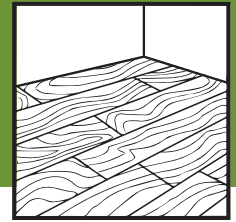

© A.I.S.E

Dry cleaning - loose dirt

- Vacuum or sweep floors on a regular basis using a Bona Dusting Pad to remove loose dirt.
- Remove spills and stains with Bona Spray Mop.



Moist cleaning - Stubborn dirt

- Spray or mop floors with a solution of Bona Clean W10 and water (1 dl to 10 litres).
- Remove using a Bona Cleaning Pad.



Moist cleaning - Stubborn dirt

- Pour a solution of Bona Clean W20 and water (1 dl to 10 litres) into the machine tank.
- Attach a white or red scouring pad to the machine.
- Clean using the minimum amount of solution and ensure there are no puddles on the floor.
- Replace the cleaning water frequently.




Deep Cleaning Instructions

Wooden Sports Flooring (Lacquered)

Part of the Bona Care Program


WS-DC

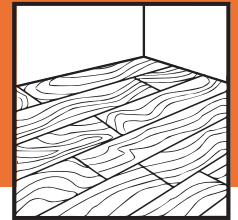

© A.I.S.E

For best results, we recommend using Bona DeepClean W in combination with our Bona PowerScrubber. If using Bona DeepClean W with other scrubbing machines, follow the manufacturer's instructions for preparation and operation.

- Attach white or red brushes to the Bona PowerScrubber.
- Fill the tank with 1 litre of Bona DeepClean W. Fill the remaining volume with 9 litres of water.
- Set the brush contact pressure to medium or high.
- Clean the floor in a systematic way. Ensure there are no puddles on the floor and remove any residual liquid immediately with a mop.
- After cleaning, place the machine on a water-resistant surface.

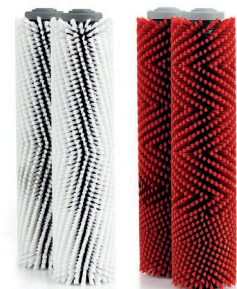

To remove stubborn scuff marks and ingrained dirt, set the machine to maximum pressure. When running at maximum pressure ensure the machine is constantly in motion and never use with dry brushes.

Warning: running at maximum pressure may damage some floors.

Tip!

For tough marks

- Dilute Bona DeepClean W with water (1:5 ratio) in a spray bottle
- Spray the area and wait for 3 minutes
- Scour using the Bona PowerScrubber


Deep Cleaning (B)

Protecting Instructions

Wooden Sports Flooring (Lacquered)

Part of the Bona Care Program

WS-P

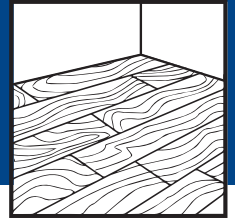

© A.I.S.E.

The Bona Sportive Finish surface is designed to be hard-wearing and low maintenance, requiring only cleaning to function well. If the floor becomes slippery, perform a thorough deep clean surface treatment. If this is not sufficient or if the surface is damaged, then a full recoating should be considered (see document WS-RC).


Protecting (C)

Recoating Instructions

Wooden Sports Flooring (Lacquered)

Part of the Bona Care Program

WS-RC

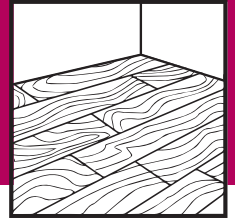

© A.I.S.E.

This guide assumes that the surface was previously treated with Bona Sportive Finish and that the floor has no polish. If polish is present or the surface finish is unknown, then a full polish removal is required (see separate instructions WL-PR).

- Degrease and clean the surface thoroughly using the Bona PowerScrubber (red brushes) and Bona DeepClean W diluted with water in the tank (1:10).
- Ensure there are no puddles of residual liquid on the floor.
- Abrade the surface with Bona Diamond Abrasives grit 80. Attach the abrasive to a Multi or Quattro Disc with intermediate pads in between. Abrade corners and edges manually. We recommend using an eccentric sander.
- Abrade the surface again with Bona Diamond Abrasives grit 240.
- Clean using the Bona PowerScrubber with pure clean water in the tank.
- Allow the surface to dry.



1:10




Recoating Instructions

Wooden Sports Flooring (Lacquered)

Part of the Bona Care Program

WS-RC

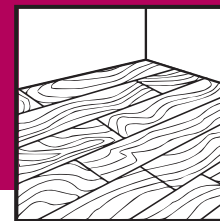

© A.I.S.E

Recoating (D)

Application of Bona Sportive Paint

Application of paint is only necessary for areas that are damaged and in need of repair. For undamaged areas, simply apply Bona Sportive Finish.

Application rate:

6-10 m²/lit. (167-100 g/m²) or 120-200 metres of a 50 mm line.

Drying time:

Line markings – 1-2 hours at 20°C/60% RH.

Complete zones/areas – 3-4 hours.

You will need:

Small microfiber roller or brush

High quality masking tape (blue or fineline).



- Press the tape firmly to the floor. Remove as soon as possible so it does not stick fast to the surface.
- Apply paint evenly and overlap “wet-on-wet” without interruption. Note: Application affects the opacity of the paint. For line-markings apply enough to cover in one coat. In zones or larger areas, for best results first apply a thin coat, followed by a normal coat at normal or high application rate, depending on the colour.
- Remove the masking tape directly, or at least while the paint is still wet.
- Allow to dry. Apply a second coat if necessary.

Application of Bona Sportive Finish

For best results, apply finish one day after painting. Although intermediate sanding is not required, paint older than 24 hours requires light abrasion prior to overcoating.

Application rate:

8-10 m²/litre (120 g/m²).

Drying time:

2.5-3 hours at 20°C/60% RH.

You will need:

Roller or T-bar applicator.



- Add Bona Sportive Hardener to the Bona Sportive Finish and shake the container thoroughly. If using less than a full can, shake the can prior to decanting. Mixed product must be used within 8 hours.
- Apply the mix evenly with a smooth flowing action, avoiding accumulation of the finish. Keep the time between overlapping sections to minimum (for large floors this may require several people).
- Under normal conditions (20 °C/60 % RH and proper air flow), the floor is ready for light traffic use 8 hours after the final application and full use after 72 hours. Allow 1 week before using wet cleaning methods to allow the finish to reach optimal hardness.