


Create your own wood story

Application of blends - Bona oils mixed 1:1

1. Sand according to sanding sequence for Colour or Brushed.
2. Waterpop for more intense colouration if desired. If waterpopping, allow to dry until the following day.
3. Stir the oils separately. Pour both into a larger container and stir again carefully.
4. Distribute the oil with an oil resistant squeegee.
5. Observe the wood's absorbency rate and redistribute oil to certain areas if needed.
6. Massage the oil into the wood using a Bona Red Pad.
7. Remove surplus oil using cotton cloths and let dry.
8. For best result, dry buff using a Bona Wool Pad the next day.

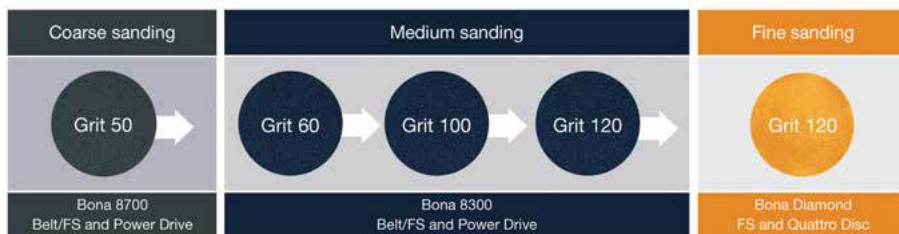

Sanding sequence for Colour



Sanding sequence for Brushed

