


Create your own wood story

Application of oil and tone

1. Sand according to sanding sequence for Colour.
2. Apply Rich/Nordic Tone and let dry.
3. Distribute the oil using an oil resistant squeegee.
4. Observe the wood's absorbency rate and redistribute oil to certain areas if needed.
5. Massage the oil into the wood using a Bona Red Pad.
6. Remove surplus oil using cotton cloths and let floor dry.
7. For best result, dry buff using a Bona Wool Pad the next day.

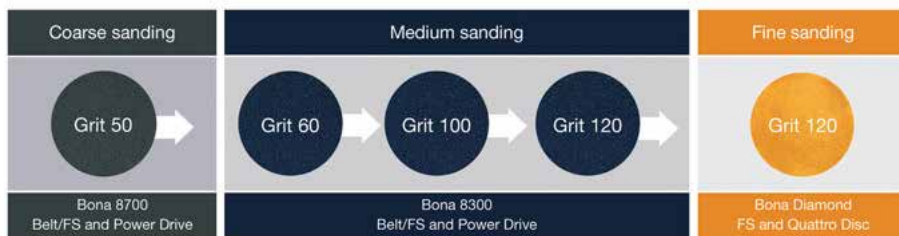

Sanding sequence for Colour

