


Create your own wood story

Application of oil, tone and mix colour

1. Sand according to sanding sequence for Colour.
2. Add up to a whole bottle of Bona Mix Colour to Bona Rich/Nordic Tone and shake the mixed can thoroughly.
3. Apply the mixed tone and let dry.
4. Distribute the oil using an oil resistant squeegee.
5. Observe the wood's absorbency rate and redistribute oil to certain areas if needed.
6. Massage the oil into the wood using a Bona Red Pad.
7. Remove surplus oil using cotton cloths and let dry.
8. For best result, dry buff using a Bona Wool Pad the next day.

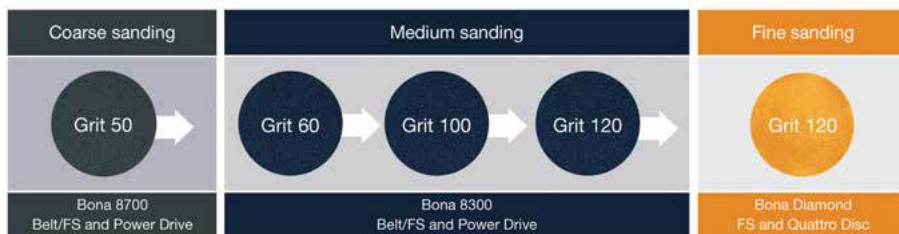

Sanding sequence
for Colour

